

INSTRUCTIONS TO REPLACE SEAT:

- 1. Remove valve from line and flush of media
- 2. Remove the socket head cap screws
- 3. Remove the seat retainer from valve face
- 4. Seat and spring should be attached to seat retainer.
- 5. Remove the seat and spring assembly from retainer
- 6. Clean the retainer groove and valve body face of any debris
- 7. Place spring around the seat groove and snap into the retainer as shown.
- 8. Place seat retainer assembly back into valve and align bolt holes
- 9. Replace and secure cap screws.